

**Telephone:**  
**Fax:**  
**VAT Registration No.:**

<b>Name:</b>		<b>Manufacturer:</b>	BMW
<b>Address:</b>		<b>Model:</b>	e38
		<b>Year:</b>	1996
		<b>Registration:</b>	
<b>Tel - Private:</b>		<b>Mileage:</b>	
<b>Tel - Business:</b>		<b>Job number:</b>	

**Inspection service LED together with clock symbol**

E46: Service interval indicator can only be reset using suitable diagnostic equipment.

Excluding E46:

Switch ignition ON.

Connect LED test lamp between terminal 7 of the engine diagnostic connector and earth **Fig. 84765**. Diagnostic connector located adjacent to left or right-hand turret or on bulkhead.

After 12 seconds 5 green LED's will illuminate.

Switch ignition OFF.

Wait 20 seconds.

Switch ignition ON.

Connect LED test lamp between terminal 7 of the engine diagnostic connector and earth.

After 12 seconds 5 green LED's will illuminate.

Switch ignition OFF.

**Fig. 84765**

