

Telephone:
Fax:
VAT Registration No.:

Name:		Manufacturer:	BMW
Address:		Model:	e38
		Year:	1996
		Registration:	
Tel - Private:		Mileage:	
Tel - Business:		Job number:	

Radio frequency transmitter

Type 1

System operation

- Pressing lock button **Fig. 1** [2] activates alarm, central locking, immobilizer and double locking system.
- Some models:
- Holding key lock button **Fig. 1** [2] in depressed position closes windows and then sunroof.
- If key lock button **Fig. 1** [2] is released accidentally, proceed as follows (if fitted with alarm system):
- Briefly press and release unlock button **Fig. 1** [1].
- Press and hold lock button **Fig. 1** [2].
- Alarm system gradient sensor and interior movement sensor can be deactivated, proceed as follows (if fitted):
- Briefly press key lock button **Fig. 1** [2] after activating alarm, central locking, immobilizer and double locking system.
- Alarm system gradient sensor and interior movement sensor are switched off until alarm, central locking, immobilizer and double locking system are deactivated.

Fig. 1

Programming

When

- Key batteries completely discharged.
- Key batteries not replaced within 60 seconds.
- Key added or replaced.
- DO NOT press remote control buttons during battery replacement.

How

- Unlock vehicle using remote control.
- Enter vehicle. Close driver's door.
- Switch ignition ON and OFF.
- Press and hold unlock button **Fig. 1** [1].
- Press lock button **Fig. 1** [2] briefly 3 times within 10 seconds keeping unlock button [1] depressed.
- Release unlock button **Fig. 1** [1].
- Some models: LED **Fig. 1** [3] flashes slowly for 10 seconds.
- Some models: Central locking system locks and unlocks rapidly to indicate correct programming.
- Some models: Repeat above procedure if central locking system does not work and LED does not flash or LED flashes continuously.

NOTE: A maximum of 4 keys can be programmed. Carry out programming procedure for each key within 30 seconds.

Type 2

System operation

- Pressing lock button **Fig. 2** [1] activates alarm, central locking and double locking system.
- Holding key lock button **Fig. 2** [1] in depressed position closes windows and then sunroof.
- If key lock button **Fig. 2** [1] is released accidentally, proceed as follows (if fitted with alarm system):
- Briefly press and release unlock button **Fig. 2** [2].
- Press and hold lock button **Fig. 2** [1].
- Alarm system gradient sensor and interior movement sensor can be deactivated, proceed as follows (if fitted):
- Briefly press key lock button **Fig. 2** [1] after activating alarm, central locking and double locking system.
- Alarm system gradient sensor and interior movement sensor are switched off until alarm, central locking and double locking system are deactivated.

Fig. 2

Programming

When

- Key added or replaced.

How

- Switch ignition ON and OFF.

